


Fitting instructions for Hauling Shafts & ropes



1. Attach the two pulk arms, with bolt heads and washers on the inside, nuts and washers on the outside.
2. Pivot pins are fitted from the outside in. These allow the hauling shaft to be conveniently removed from the pulk.




 3. The button clips point upwards when the pulk tubes are fitted the correctly.



4. Slide the T-bracket cross-tube assembly down both pulk tubes, to the stops (depress the button clips to do this).

5. Slide the wider hauler tubes over the pulk tubes until the button clips engage. The hauler tubes are identical and can be fitted left or right.

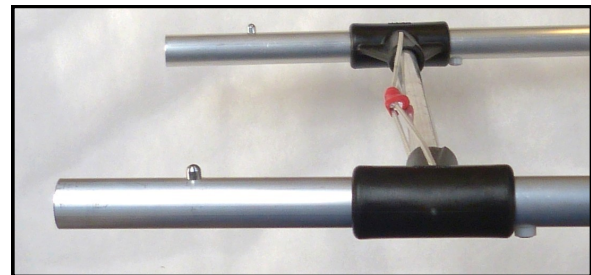

6. The pulk tubes can now be attached to the harness pins.



7. On Trail Pulk's hauling ropes can be attached in one of two ways depending whether shaft arms are fitted or not, either through the large hole on the shaft arms or using the drilled hole in the flange of the pulk.

8. On Expedition pulks hauling ropes can either be attached through the shaft arms (the same as on the Trail) or if shaft arms are not being fitted, through hauling loops which are supplied with the hauling ropes (Expedition set only).

