----- Cut here to remove. Do Not Tear! ------

FLY CREEK HIGH VOLUME UL SET UP INSTRUCTIONS

- 1. Remove contents from stuff sack. Spread out the tent body.
- 2. Assemble the pole. To ensure each pole section is fully seated insert each pole section into the next by hand, instead of allowing the shock cord to snap them together.
- 3. Position the assembled pole set on top of the tent body. Match the colors of the pole ends with the matching colors of the webbing on the tent body.
- 4. Insert the pole tips into the grommets at the four corners of the tent.
- 5. Attach all plastic clips on the tent body to the pole structure.
- 6. UL1 & UL2: Attach the "H Clip" to the "S Stopper" at the foot end of the tent body.
 - UL3: Attach the "H Clip" to the "PC Swivel H".
- 7. UL3: Clip the ends of the crossover pole into the clear plastic Ball Cap clips located on the sides of the tent body.
- 8. Stake out the two cord loops at the head of the tent and the three loops at the foot.
- 9. Drape the rainfly over the tent so that the door on the fly lines up with the door on the tent body.
- 10. UL1 & UL2: Attach the Velcro tab on the underside of the fly to the corresponding pole for the best stability.
- 11. Locate the clips on the underside of the fly along the side walls of the tent. Attach each clip to the corresponding webbing loop sewn into the tent body.
- 12. Make sure the webbing at the corners of the rainfly is completely slackened. Attach the buckles on the rainfly to those on the tent body.
- 13. UL1 & UL2: Attach the two cord loops at the rear of the fly to the stakes that you used for the tent body.
- 14. Evenly tension the webbing on each corner as needed to keep the rainfly taut.
- 15. Stake out the vestibules then stake out all remaining guylines.

Separate 6", large diameter pole segment included for emergency field repair. Slide repair pole over the break to act as a splint.

FAST FLY SET UP INSTRUCTIONS

If you purchase the optional Big Agnes footprint for your Fly Creek UL tent it will enable you to pitch a Fast Fly shelter while leaving the tent body behind. The Fast Fly configuration requires the footprint, rainfly, poles and stakes.

- 1. Lay the footprint on the ground and stake out. Take note that the front of the footprint is wider than the rear.
- 2. Assemble the pole.
- 3. Position the assembled pole set on top of the footprint and match the colors of the pole ends with the matching colors of the footprint webbing.
- 4. Insert the pole tips into the grommets at the four corners of the footprint.
- 5. Drape the rainfly over the pole structure.
- 6. UL1 & UL2: Attach the Velcro tab on the underside of the fly to the corresponding pole for the best stability.
- 7. Make sure the webbing at the corners of the rainfly is completely slackened. Attach the buckles on the rainfly to those on the footprint.
- 8. UL1 & UL2: Attach the two cord loops at the rear of the fly to the stakes that you used for the footprint.
- 9. Evenly tension the webbing on each corner as needed to keep the rainfly taut.
- 10. Stake out the vestibules then stake out all remaining guylines.



Fly Creek UL1 HV Tent Body and Fly












Fly Creek UL2 HV Tent Body and Fly

H Clip

Stopper

PC Swivel H

Ball Cap

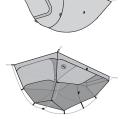

Fly Creek UL1&2 HV Tent



moɔ.ɛənpɛpid@dɔəナ Please feel free to contact us if you have any questions or comments. Thanks for choosing a Big Agnes tent!

ΗΕΓΡΕUL ΗΙΝΤS FOR TENT SET UP

- fumbling around in the dark. using them for the first time to avoid late night bickering with tent mates while Our tents are easy to set up but we suggest you practice once at home before
- We recommend staking out all corners, vestibules and guylines to increase space Before pitching tent, clear campsite of debris that may pierce tent floor.
- and keep your tent from becoming a tumbleweed.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- Push rather than pull poles through pole sleeves. .leirətem

ТЕИТ САRE

Storage

not covered under warranty. growth, which may cause your tent to smell, leak or delaminate. Mildew damage is weblim ni fluser nes qmeb they your tent damp can result in mildew place. Never leave your tent in hot temperatures (such as a car trunk or attic space), your tent a different way each time to avoid permanent creases. Store in a cool, dry Always make sure your tent is dry and free of debris before storing. Fold and roll

BuinselD

.sbiupil gnidsewdsib fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or machine-wash your tent. Detergents and dry cleaning solvents will damage the recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or wash the entire tent, always use cleaners recommended specifically for tents. We For light cleaning, you can sponge the tent with warm water. If it's necessary to

puilee2 mee2


your tent. Damage caused by misapplication may void warranty. extra protection. Make sure the seam-sealer is completely dry before re-packing been taped do not need to be seam sealed with a liquid sealer unless you want Seam tape alone is durable enough to prevent water leakage. Any seams that have

Zippers

.916) Care. filled with dirt, vacuum or brush zippers before storing tent. We recommend McNett Keeping your zippers clean will help keep the coils and sliders from wearing out. If

Repairs and Warranty

must be clean and free of debris. at the discretion of Big Agnes, at a reasonable charge. Tents returned for repair Damage due to misuse, normal wear and tear, or improper care may be repaired, by owner, misuse, accidents or damages caused by uses other than intended. do not warranty products damaged from normal wear and tear, alteration made All Big Agnes tents are guaranteed against manufacturing or material defect. We

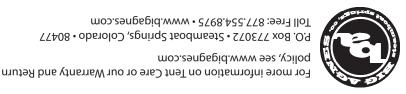

moo.29npspid.www • 2798.422.778 :9917 lloT P.O. Box 773072 • Steamboat Springs, Colorado • 80477 moo.sengegid.www ees ,yoiloq

----- Cut here to remove. Do Not Tear!