

## FLY CREEK HV UL BIKEPACK SET UP INSTRUCTIONS


1. Remove contents from stuff sack. Spread out the tent body.
2. Assemble the pole. To ensure each pole section is fully seated insert each pole section into the next by hand, instead of allowing the shock cord to snap them together.
3. Position the assembled pole set on top of the tent body. Match the colors of the pole ends with the matching colors of the webbing on the tent body.
4. Insert the pole tips into the grommets at the four corners of the tent.
5. Attach all plastic clips on the tent body to the pole structure.
6. Stake out the two cord loops at the head of the tent and the three loops at the foot.
7. Drape the rainfly over the tent so that the door on the fly lines up with the door on the tent body.
8. Attach the Velcro tab on the underside of the fly to the corresponding pole for the best stability.
9. Locate the clips on the underside of the fly along the side walls of the tent. Attach each clip to the corresponding webbing loop sewn into the tent body.
10. Make sure the webbing at the corners of the rainfly is completely slackened. Attach the buckles on the rainfly to those on the tent body.
11. Attach the two cord loops at the rear of the fly to the stakes that you used for the tent body.
12. Evenly tension the webbing on each corner as needed to keep the rainfly taut.
13. Stake out the vestibule then stake out all remaining guylines.

**Separate 6" length pole segment included for emergency field repair. Slide repair pole over the break to act as a splint. Secure splint in place with tape.**

## FAST FLY SET UP INSTRUCTIONS

If you purchase the optional Big Agnes footprint for your tent, it will enable you to pitch a Fast Fly shelter while leaving the tent body behind. The Fast Fly configuration requires the footprint, tent fly, poles and stakes.


1. Lay the footprint on the ground and stake out. Take note that the front of the footprint is wider than the rear.
2. Assemble the pole.
3. Position the assembled pole set on top of the footprint and match the colors of the pole ends with the matching colors of the footprint webbing.
4. Insert the pole tips into the grommets at the four corners of the footprint.
5. Drape the rainfly over the pole structure.
6. Attach the Velcro tab on the underside of the fly to the corresponding pole for the best stability.
7. Make sure the webbing at the corners of the rainfly is completely slackened. Attach the buckles on the rainfly to those on the footprint.
8. Attach the two cord loops at the rear of the fly to the stakes that you used for the footprint.
9. Evenly tension the webbing on each corner as needed to keep the rainfly taut.
10. Stake out the vestibule then stake out all remaining guylines.

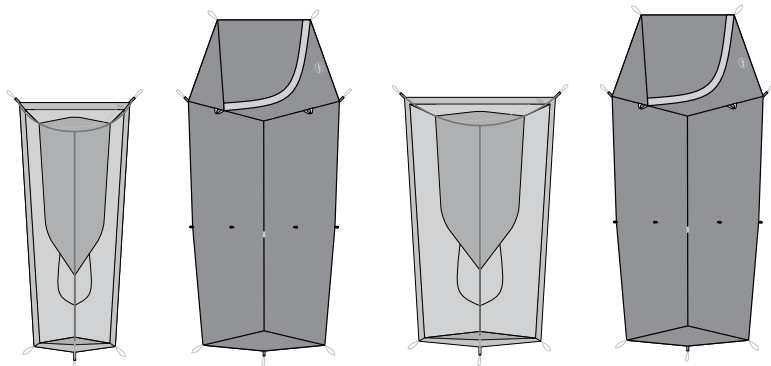

## Bikepacking Specific Features

Singletrack, two-track, and roadie riders rejoice! Our Bikepack tents are perfectly equipped for all two-wheeled, overnight adventures.

1. 12" Shortstik Poleset is ideal for packing onto handlebars, panniers and saddlebags, or just saving space in any pack.
2. Compression stuff sack with daisy-chain webbing system, varied length Velcro loops, and side release buckles for multiple bike-frame attachment configurations.
3. Daisy-chain webbing loops on the fly's exterior for drying wet clothes and gear.
4. Elastic webbing securely stores your helmet off the ground.
5. Extended footprint creates a vestibule floor for dry, dirt-free changing and gear storage.
6. Fully taped water proof stuff sack.

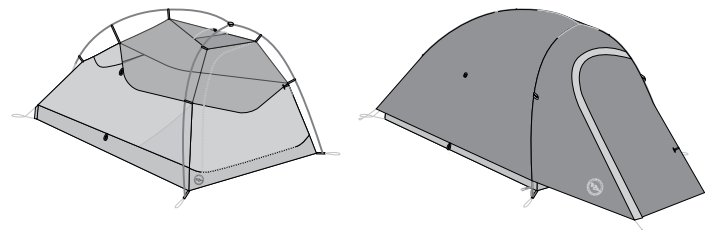

Fly Creek HV UL Bikepack

## Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.  
[service@bigagnes.com](mailto:service@bigagnes.com)

## HELPFUL HINTS FOR TENT SET UP

- Our tents are easy to set up but we suggest you practice once at home before using them for the first time to avoid late night bickering with tent mates while fumbling around in the dark.
- Before pitching tent, clear campsite of debris that may pierce tent floor.
- We recommend staking out all corners, vestibules and guylines to increase space and ventilation. Securely staking out your tent and all guylines is crucial to maintaining the structural integrity of your tent.
- Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the material.
- Push rather than pull poles through pole sleeves.

## TENT CARE

### Storage

Always make sure your tent is dry and free of debris before storing. Fold and roll your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never store your tent in hot temperatures (such as a car trunk or attic space), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

### Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

### Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

### Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent. Do not apply any balms or lubricants to your zippers.

### Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired, at the discretion of Big Agnes, at a reasonable charge. Tents returned for repair must be clean and free of debris.

For more information on Tent Care or our Warranty and Return policy, see [www.bigagnes.com](http://www.bigagnes.com)

P.O. Box 773072 • Steamboat Springs, Colorado • 80477  
Toll Free: 877.554.8975 • [www.bigagnes.com](http://www.bigagnes.com)

