



EMO ALCOHOL STOVE




IMPORTANT NOTICE


Read this manual carefully before use. For outdoor use only! Familiarize yourself with the product and master how to handle it. Only then fill it with fuel and light it. Use alcohol only. Never use gasoline or other petroleum based fuels. Never refill burner until flame is out. Improper use can cause serious injury to the user and persons around.

INSTRUCTION MANUAL

1. Unpack the stove from the transport packaging and place it on a firm, flat and non-flammable surface.

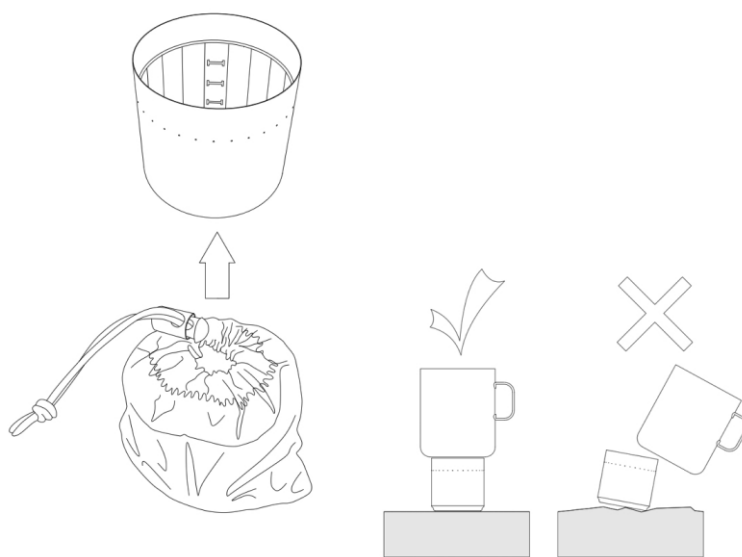


2. Fill the stove with fuel (alcohol for alcohol stoves) according to the internal lines.

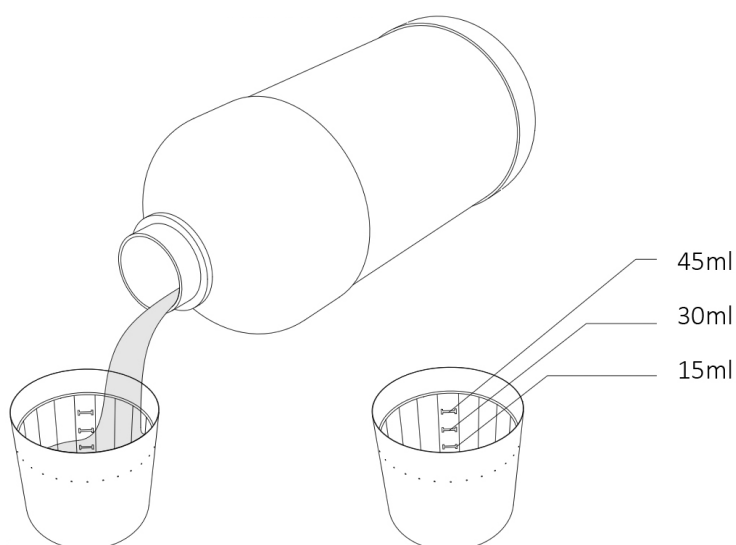


WARNING

Use alcohol only. Never use gasoline or other petroleum based fuel. This may result in serious injury. Never refill burner until flame is out. Alcohol flame can be difficult to see in daylight. Check for heat from burner, cool before refilling.


3. Ignite the fuel. It is recommended to use matches (or firestarter in an emergency). Use extreme caution not to overturn stove! Do not throw the matches into the stove! Do not touch the stove while burning!

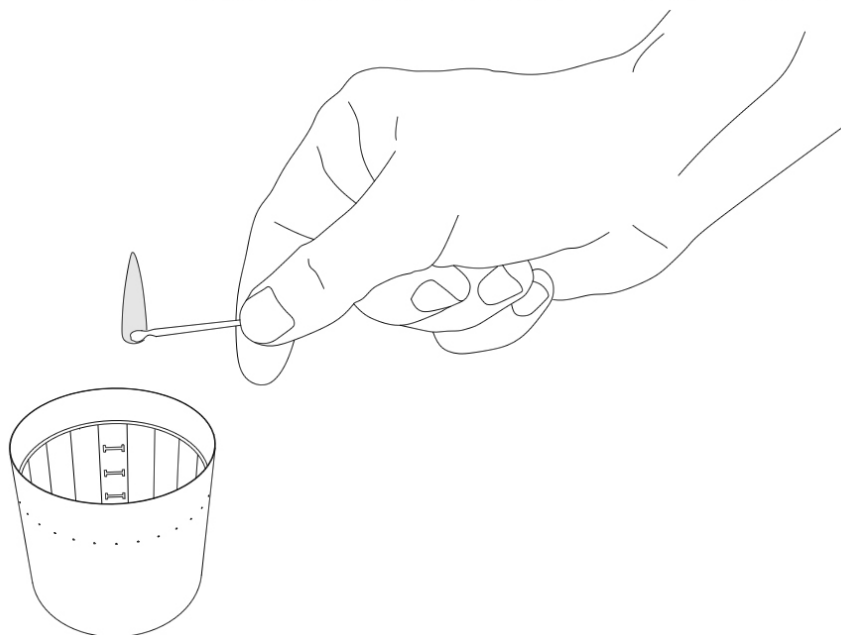


4. Maximum heat will occur within 10 seconds after full ignition of the fuel (under normal thermal, atmospheric and weather conditions). If there is no ignition, repeat point 3!

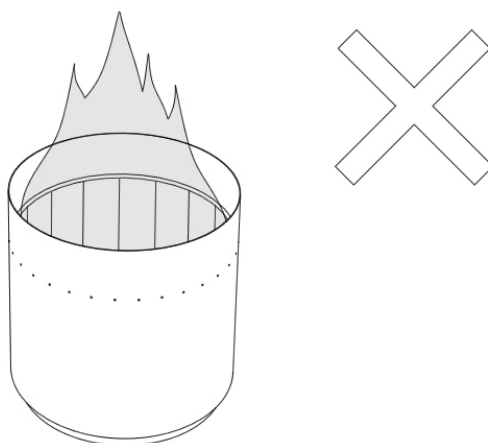


5. Full power of the stove (correct burning) occurs when the external nozzles around the entire circumference start to burn. If the stove does not burn smoothly, it is most likely due to the quality of the fuel. Try using different brand of fuel with a minimum alcohol content of 90%.

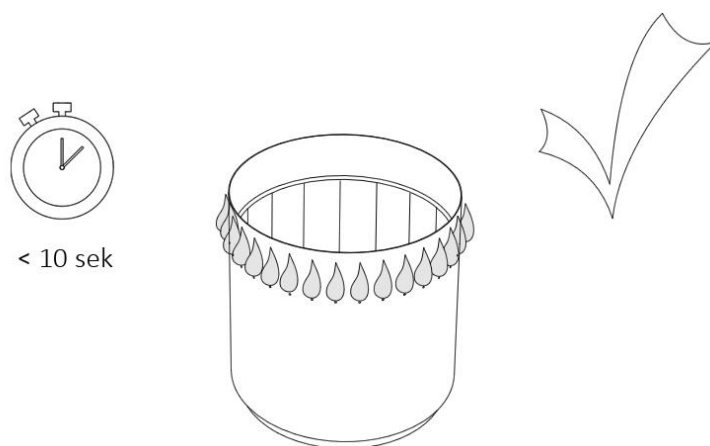


6. At this point, the temperature is very high around the stove and especially above the stove! Beware of burns!

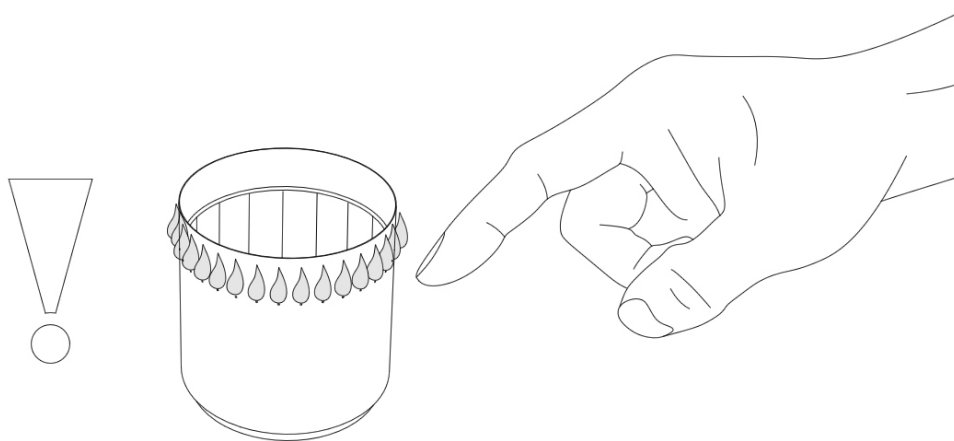


7. To ensure the highest possible burning efficiency, especially in a windy environment, use a standard non-flammable windscreen (is not included in package).

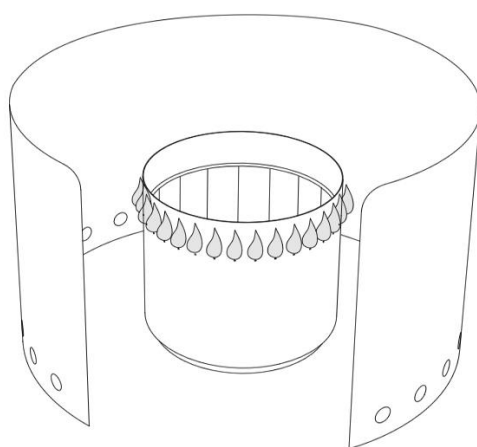

8. From this point on, You can place a pot directly on the stove. The recommended diameter of the cooking pot is 9-15cm (3,5-5,9 in). For an efficient way of cooking / heating, use a lid on the pot. Maximum weight placed on the stove is 2kg (70,5oz).

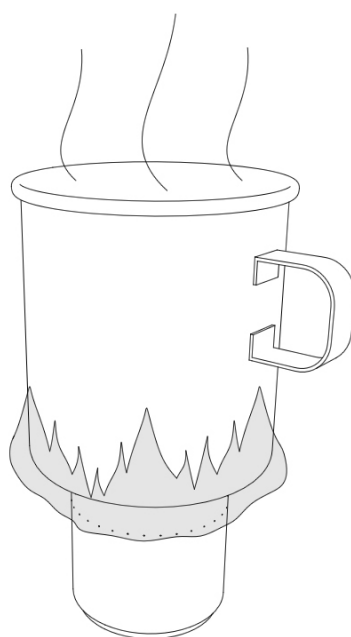


9. After boiling the water is finished, remove the pot from the stove and leave the cooker stove to burn excessive fuel and cool down. Watch out for the heated parts of the pot, they might still be hot and cause injury.

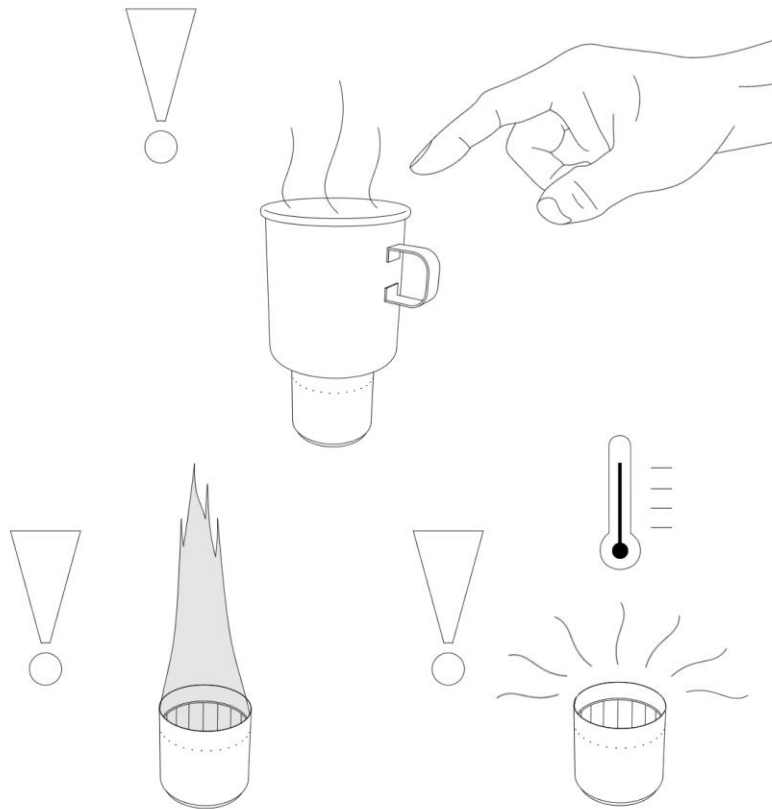

INFO

When the fuel is cooling down, a higher flame may start to rise from the uncovered stove. This is normal. The higher flame will eventually extinguish itself. After the fuel burns out, the stove is still be hot for some time.

10. After the stove has cooled down with no fuel in it, store it safely in the transport packaging or use it again.

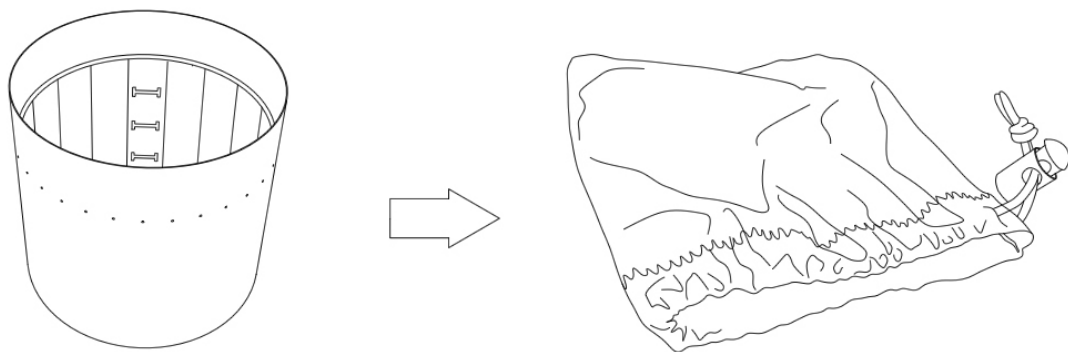

TECHNICAL INFORMATION

- Fuel type: alcohol intended for alcohol stoves (min. alcohol content 90%)
- Fuel consumption: 15ml (0.5 fl oz) of fuel for a burning time of approximately 7-8min at 28°C (82,4°F) ambient temperature and no wind)
- Weight: 9g (0.28oz)
Weight with transport packaging: 12g (0,42oz)
- Size: h: 5,1cm (2in), w: 5,3cm (2.08in)
- Material: Aluminium
- Material of transport shipping packaging: tyvek, plastic, nylon, metal

SAFETY INFORMATION

- Before each use, visually check the stove for mechanical damage or deformations. If any are found, do not use the stove!
When using the stove, always place it straight on a flat, firm and non-flammable surface.
- This stove may only be used on a horizontal surfaces.
- This stove is for outdoor use only.
- Keep all flammable materials and substances away from the stove when using, at least 1 m (3.28ft) from the side and 1.5 m (4.92ft) from the top.
- Around the stove, considerable heat is always generated during combustion. Beware of burns.
- The stove is intended for heating and cooking water and preparing food.
- Never use the stove for any purpose other than that for which it is intended.
- Never use the stove in a place where there is a risk of falling objects.
- Before lighting the stove, check its stability with the pot on it, just as it will be during cooking.
- Keep out of reach of children, especially when the stove is in operation.
- Only handle the stove when it has completely cooled down.
- Never use excessive force when handling the stove, it could be deformed.
- Never use the stove in a place where the surface may be deformed or discolored due to the high heat generated by the stove burning.
- Never carry a lit stove.
- Use only alcohol intended for alcohol stoves as fuel.
- Do not fill the stove with more fuel than the top inner line (max. 45ml).
- Use only outdoors! Burning alcohol produces dangerous fumes.
- Never ignite if the stove is covered with fuel from outside or the fuel is spilled around the stove.
- Never add fuel to a burning or hot stove.
- Warning: Never touch the hot stove. Never touch the stove during operation!
- Never look directly at the stove during ignition or operation.
- When using the stove, pay attention to the increased level of health, life and property safety.
- When lighting or burning the stove, never bring your face or hands close to the stove.
- Beware of burns from radiant (invisible) heat above a burning or igniting stove.
- Never use water to extinguish a burning stove.
- Emergency extinguishing of the burning stove can be performed using a fire extinguisher, covering with a non-flammable fire blanket or forcibly folding the stove with an empty pot.
- For safe operation, it is recommended to have enough water for extinguishing fire around the stove, caused by unprofessional handling or accident.
- Only use one stove per pot. Be careful not to boil the contents of the container.
- Strong winds can cause the burning stove to go out or overturn.
- If you notice (see / hear) that the flame / sound of the burning stove does not correspond to the normal state, stop using the stove immediately.
- In order not to deform the stove, it is recommended for transport to be placed in a transport package (included in the package) and stored in a solid package (for example directly in a pot).
- During operation, the stove must contain nothing but fuel. Do not throw used matches for the fire into the stove!
- While using the stove, some parts of the stove may change color. This color is natural and does not affect the performance or function of the stove.
- Do not use the stove as an illuminator or heater.
- Never use the stove to dry clothes.
- Never light the stove in a tent, shelter, car, caravan, boat.

contact: emo.outdoor@gmail.com

Handmade in Slovakia, Made in EMO.OUTDOOR