
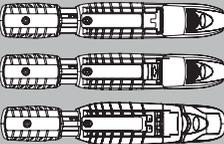



# ROTTEFELLA®


## Back Country; Manual, Auto and Magnum



**For Roller ski: Use Xcelerator Roller ski binding with safety screws only in combination with Xcelerator Mounting Plate!**


|   |   |   |  |
|---|---|---|--|
|  |  |  |       |
| <b>Ski length:</b><br>All   | Rottefella BC Manual<br>Rottefella BC Auto<br>Rottefella BC Magnum                |  | <b>Front: 6,3 x 17</b><br><b>Under flex: 6,15 x 24</b><br><b>Rear and heel: 6 x 14</b> |

- ① Match correct shoe size, mount the jig with black BC-insert onto the ski, matching the balance point (1). Drill using the advised drill bit (2), remove the jig and use binding glue into the holes (3).

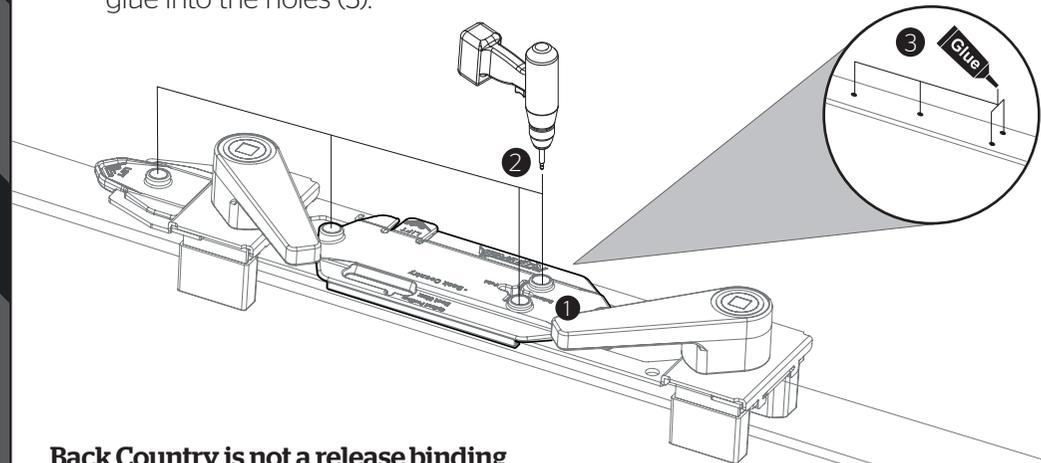

**Back Country is not a release binding**

- ② Adjust heel to match shoe size and fasten the binding using the correct screw in each hole as illustrated below. Tighten screws manually.

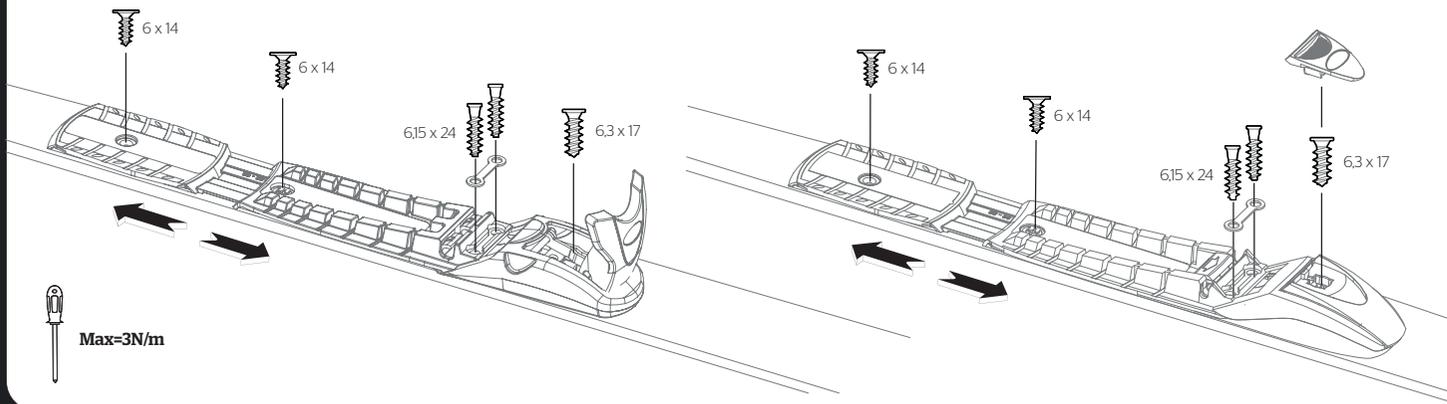

- ③ Push the flex in place (1) and place stickers to cover up screw holes (2).

